

# ALBA

## INSTRUCTION MANUAL FOR WATCH CALIBRE VJ21



**WARNING**



**THIS PRODUCT CONTAINS A BUTTON BATTERY**

If swallowed or placed inside any part of the body, the battery can cause severe or fatal injuries within 2 hours or less.

Button batteries are hazardous whether new or used. Keep batteries out of reach of children.

If you think the battery may have been swallowed or placed inside any part of the body, seek immediate medical attention. Contact the Australian Poisons Information Centre immediately on 13 11 26 (New Zealand 0800 764 766) for 24 / 7 fast, expert advice.

# HOW TO SET

## ○ TWO HANDS WATCH

### TO SET THE TIME



Pull out the crown, and set the time.

If your watch is of the model whose crown cannot be pulled out (a screw-lock type crown), turn the crown counterclockwise to loosen the screw and then pull out the crown and set the time.

\*The mechanisms of the quartz watch and the mechanical watch are different. When you set the time, first set the minute hand to a properly advanced time, then return the minute hand to the correct time.

\*Telephone time casting service (tel. 117) might be helpful when you set the time.

## ○ THREE HANDS WATCH OR WATCH WITH SMALL SECOND HAND

### TO SET THE TIME



1 Pull out the crown, when the second hand is at the 12 o'clock position, and the second hand stops. If your watch is one whose crown cannot be pulled out (a screw-lock type crown), turn the crown counterclockwise to loosen the screw. Then, pull out the crown, and the second hand stops.



2 Turn the crown to set the time

3 Push in the crown in accordance with a time signal. With a screw-lock type crown model, adjust the time first, and then turn the crown clockwise while depressing it until it locks in place.

\*The mechanisms of the quartz watch and the mechanical watch are different. When you set the time, first set the minute hand to properly advanced time, then return the minute hand to the correct time.

\*Telephone time casting service (tel. 117) might be helpful when you set the time.

## ○ WATCH WITH DATE FUNCTION

### TO SET THE DATE



1 Pull out the crown to the first click position. If your watch is one whose crown cannot be pulled out (a screw-lock type crown), turn the crown counterclockwise to loosen the screw, and then pull out the crown to the first click position.

\*The crown can be pulled out all the way to the second click.



2 Turn the crown to set the date before the designated date.



3 Pull the crown out to the second click, and turn the hands to set the correct date.



4 After adjusting the time and calendar, push in the crown. With a screw-lock type crown model, turn the crown clockwise while depressing it until it locks in place.

\*Do not set the date when the hands are pointing to the time between 9 P.M. and 1 A.M. If the setting of the date is made when the hands are pointing to the time between 9 P.M. and 1 A.M., the date will not change to the next date. Please set the date after turning the hands except during the above period.

\*Date adjustment at the end of the month.

It is necessary to adjust the date at the end of February and 30-day months or on the first day of March and a month following a 30-day month. Please adjust the date.

### TO SET THE TIME



1 Pull the crown out all the way to the second click and the second hand stops moving. Stop the second hand at the 12 o'clock position.



2 Turn the crown to set the time.



3 Push the crown back to the normal position in accordance with a time signal.

\*While setting the time, be sure to check that the correct A.M. or P.M. period is set. (The date will change automatically once every 24 hours.)

\*The mechanisms of the quartz watch and the mechanical watch are different. When you set the time, first set the minute hand to a properly advanced time, then return the minute hand to the correct time.

\*Telephone time casting service (tel. 117) might be helpful when you set the time.

## ○ WATCH WITH DATE OR DAY-DATE FUNCTION

### TO SET THE CALENDAR

The day of the week can be shown bilingually in English or Japanese, choose whichever you like.



1 Pull out the crown to the first click position. If your watch is one whose crown cannot be pulled out (a screw-lock type crown), turn the crown counterclockwise to loosen the screw, and then pull out the crown to the first click position.

\*The crown can be pulled out all the way to the second click.



2 Turn the crown to set the day before designated day, and turn the crown to set the designated date.



3 Pull the crown out to the second click, and turn the hands to set the correct date and day of the week.



4 After adjusting the time and calendar, push in the crown. With a screw-lock type crown model, turn the crown clockwise while depressing it until it locks in place.

\*Do not set the calendar when the hands are pointing to the time between 9 P.M. and 3 A.M. If the setting of the calendar is made when the hands are pointing to the time between 9 P.M. and 3 A.M., the date or day will not change to the next date or day. Please set the calendar after turning the hands except during the above period.

\*Date adjustment at the end of the month.

It is necessary to adjust the date at the end of February and 30-day months or on the first day of March and a month following a 30-day month. Please adjust the date.

### TO SET THE TIME



1 Pull the crown out all the way to the second click and the second hand stops moving. Stop the second hand at the 12 o'clock position.



2 Turn the crown to set the time.



3 Push the crown back to the normal position in accordance with a time signal.

\*While setting the time, be sure to check that the correct A.M. or P.M. period is set. (The date and day of the week will change automatically once every 24 hours.)

\*The mechanisms of the quartz watch and the mechanical watch are different. When you set the time, first set the minute hand to a properly advanced time, then return the minute hand to the correct time.

\*Telephone time casting service (tel. 117) might be helpful when you set the time.